

Series 2008PECSS4

Restraint and Accessories for C900 O.D. PVC Pipe at Mechanical Joint Fittings

CONTAINS BOTH DOMESTIC AND IMPORTED HARDWARE

Installation Instructions

1. Identify the pipe. The 2000PV is for use with PVC and HDPE pipe. The 4-inch through 12-inch size may be used on C900 or IPS PVC pipe as well as C906 HDPE pipe. Check to see if the spacers under the screws are in place. If the pipe is C900 or is ductile iron O.D., proceed with spacers in place. If the pipe is IPS O.D., remove the spacers. Since 3-inch, 14-inch and greater size restraints are only used with one pipe diameter (C900), no spacers are used. If used on C906 HDPE pipe, a internal pipe wall stiffener must be used.
 2. Clean the socket and the plain end. Lubrication and additional cleaning should be provided by brushing both the gasket and the plain end with soapy water or an approved pipe lubrication meeting the requirement of ANSI/AWWA C111/A21.11 just prior to slipping the gasket onto the plain end for joint assembly. Place the gland on the plain end with lip extension toward the plain end, followed by the gasket with the narrow edge of the gasket toward the plain end. [The gasket provided may be the EBAA-SEAL® Improved Mechanical Joint Gasket, there is no narrow end as the gasket is bi-directional. In certain sizes, use of the EBAA-SEAL is required to achieve the pressure ratings of the MEGALUG.]
- NOTE: In cold weather it is preferable to warm the gasket to facilitate assembly of the joint.
3. Insert the pipe into the socket and press the gasket firmly and evenly into the gasket recess. Keep the joint straight during assembly.
 4. Push the gland toward the socket and center it around the pipe with the gland lip against the gasket. Insert bolts and hand tighten nuts. Make deflection after joint assembly but before tightening bolts.
 5. Tighten the bolts to the normal range of torque as indicated [3-inch 45-60 ft.-lbs., 4 through 24-inch 75-90 ft.-lbs., 30 and 36-inch 100-120 ft.-lbs., and 42, 48 and 54-inch 120-150 ft.-lbs.] While at all times maintaining approximately the same distance between the gland and the face of the flange at all points around the socket. This can be accomplished by partially tightening the bottom bolt first, then top bolt, next the bolts at either side, finally the remaining bolts. Repeat the process until all bolts are within the appropriate range of torque.
 6. Tighten the torque limiting twist-off nuts in a clockwise direction (direction indicated by arrow on top of nut) until all wedges are in firm contact with the pipe surface. Continue tightening in an alternating manner until all of the nuts have been twisted off.
 7. If removal is necessary, utilize the 5/8 inch hex heads provided. If reassembly is required, assemble the joint in the same manner as above; tighten the screws to 60 to 80 ft.-lbs. If the Series 2000PV restraint is removed from the pipe, be sure that all of the screws, spacers (if required), and wedges are in place before the restraint is reassembled.

Steps 2-5 are requirements of AWWA Standard C600-17

APPROXIMATE SHIPPING WEIGHT: 24.46 lbs.

0120-Y

Copyright 2021 © EBAA IRON, Inc. All Rights Reserved



CONTENTS

Qty.	Description
1	8 in. 2000PV MEGALUG® Restraint
1	8 inch EBAA-SEAL® Gasket
6	3/4 in. by 4 in. Stainless Steel T-Bolts w/Nut
1	Gasket Lubricant Packet

Restraints Made in The USA



For use on water or wastewater pipelines subject to hydrostatic pressure and tested in accordance with either AWWA C600 or ASTM D2774

Series 2008PECSS4

Restraint and Accessories for C900 O.D. PVC Pipe at Mechanical Joint Fittings

EBAA IRON SALES, Inc.

P.O. Box 857, Eastland, TX 76448


Tel: (254) 629-1731

Fax: (254) 629-8931

Toll: (800) 433-1716

contact@ebaa.com

www.ebaa.com

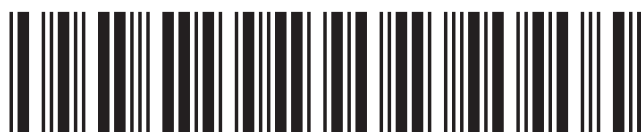

2 0 0 8 P E C S S 4

Made in the USA